


1326/1804 50mm Combi Air Stapler/Nailer

For replacement parts contact your usual Tacwise supplier.

Exploded view drawing

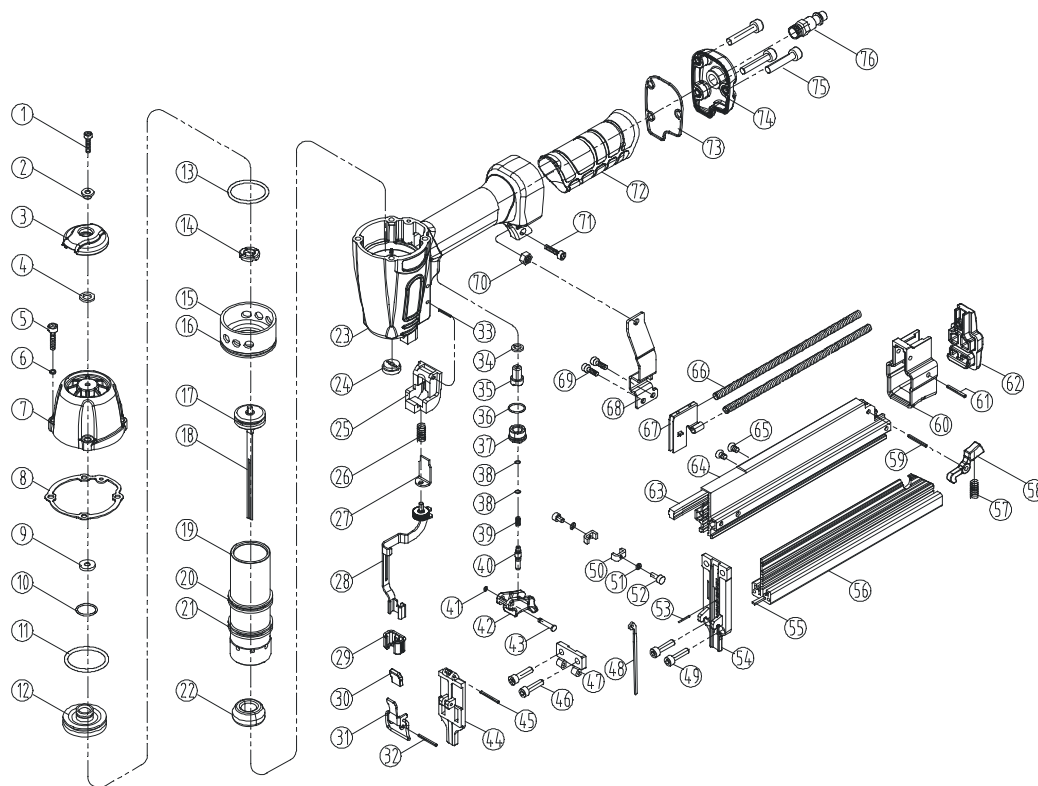

Item	Description
1	Screw
2	Bushing
3	Exhaust Cover
4	Washer
5	Screw
6	Spring Washer
7	Cylinder Cap
8	Gasket
9	Valve Seat
10	O-Ring 15.7x2
11	O-Ring 38.8x3
12	Valve
13	O-Ring 33.5x3.5
14	Stopped Washer
15	Collar
16	O-Ring 50.5x2.5
17	O-Ring 28.3x3
18	Piston Assembly
19	Cylinder
20	O-Ring 36.3x2.5
21	O-Ring 35.3x2.5
22	Bumper
23	Body
24	Joint Guide
25	Safe Guide
26	Spring
27	Safe Bracket
28	Safe Bracket Assembly
29	Safe Sleeve
30	Latch Sleeve
31	Latch Assembly
32	Spring Pin
33	Spring Pin
34	Seal
35	Trigger Valve Head
36	O-Ring 15x1.9
37	Trigger Valve Guide
38	O-Ring 5.5x1.5

Item	Description
39	Spring
40	Trigger Valve Stem
41	Washer
42	Trigger Assembly
43	Trigger Pin
44	Front Plate
45	Spring Pin
46	Screw
47	Plate
48	Oriented Bar
49	Screw
50	Stopped Plate
51	Spring Washer
52	Screw
53	Spring Pin
54	Drive Guide
55	Rail
56	Fixed Magazine
57	Spring
58	Lock
59	Spring Pin
60	Magazine Plate
61	Spring Pin
62	Joint Guide
63	Rail
64	Movable Magazine
65	Screw
66	Spring
67	Feeder Shoe
68	Support
69	Screw
70	Nut
71	Screw
72	Soft Grip Sleeve
73	Gasket
74	End Cap
75	Screw
76	Air Plug